



WALL TERMINATION WITH COVE

WALL TERMINATION WITH COVE

Installed at floor/wall where cove is specified and where movement is anticipated.
If floor/wall joint movement is not anticipated, the cove can be applied directly to the wall without the expansion joint material.

Numbering shows order of installation.

