




CONTROL JOINT TREATMENT

CONTROL JOINT TREATMENT


Exposed Joints

These are non-moving shrink control joints. For moving joints, see "Expansion Joint Treatment."
Numbering shows order of installation


1) CHASE JOINT TO CLEAN WITH DIAMOND SAW 1/4" WIDE BY 1" DEEP

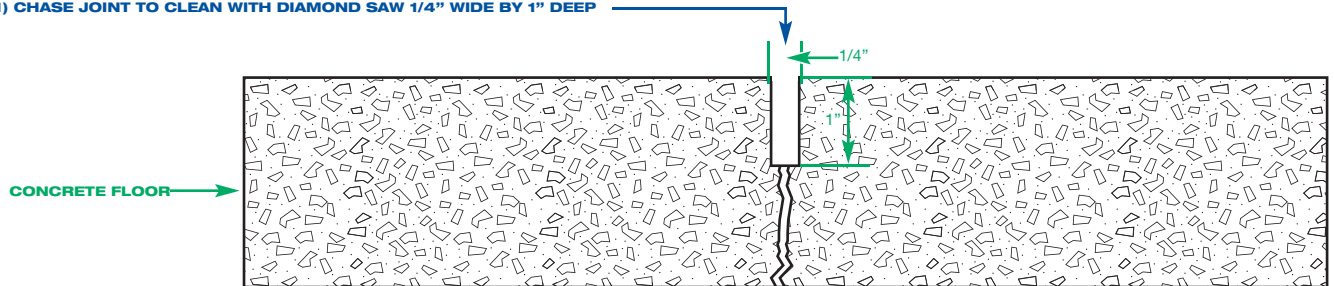

2) CHIP AWAY ANY LOOSE CONCRETE ON EITHER SIDE OF SAWCUT

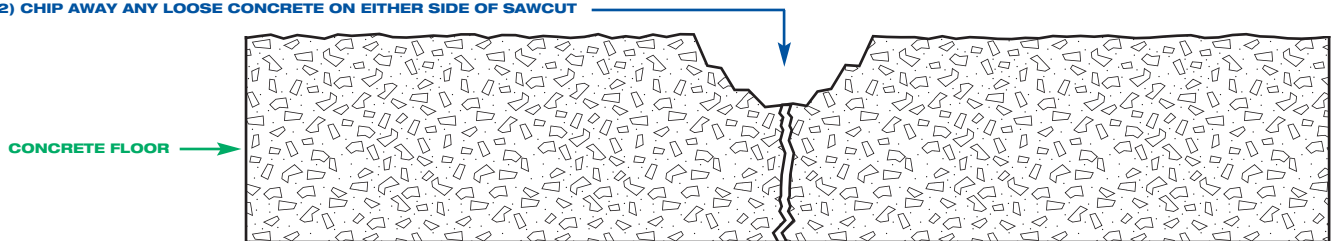


3) FILL IN VOID WITH POLYMER NATION S-15

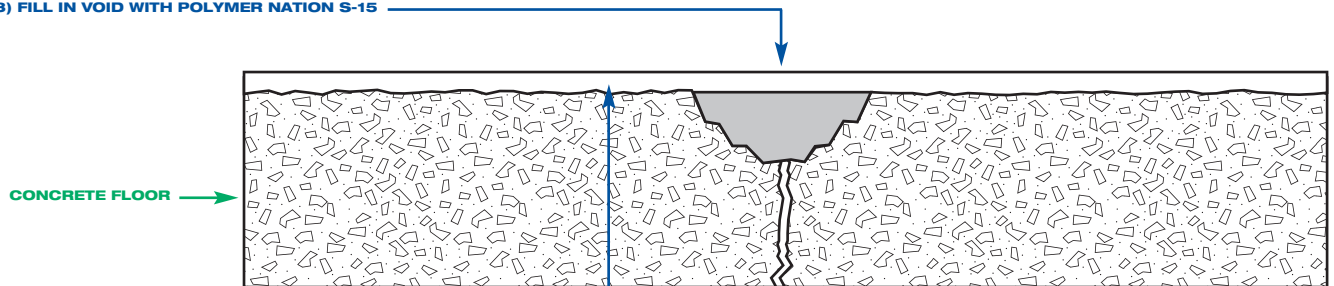

4) INSTALL SELECTED POLYMER NATION FLOORING SYSTEM

5) RE-CUT JOINT 1/8" WIDE BY 1/2" DEEP AND FILL WITH POLYMER NATION S-10

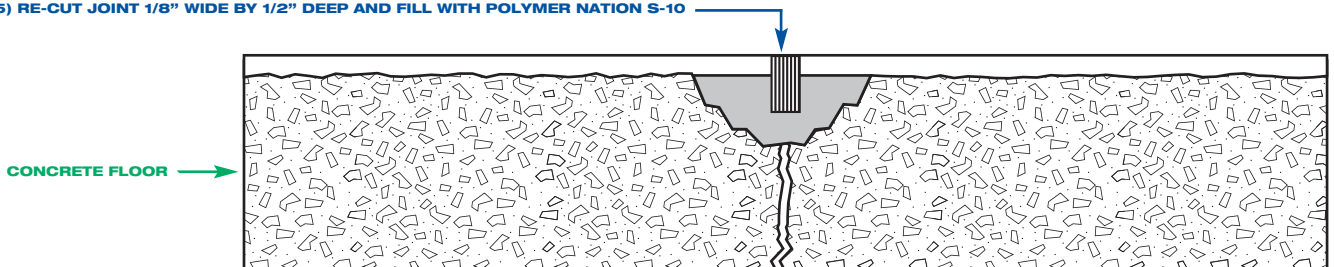

Non-exposed Joint

If customer does not want to see the joints, then follow the process below:

- 1) CHASE JOINT TO CLEAN WITH DIMAOND SAW 1/4" WIDE BY 1" DEEP.
- 2) INSTALL BACKER ROD IN COMPRESSION AND FILL VOID WITH POLYMER NATION S-10.
- 3) INSTALL POLYMER NATION FLOORING SYSTEM.